



## ARCHER BLIND ASSEMBLY INSTRUCTIONS

---

Part Number: 04621V



[www.terrainoutdoor.com](http://www.terrainoutdoor.com)

(989) 575-3122



**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

## ARCHER BLIND USAGE INSTRUCTIONS AND WARNINGS

Thank you for your purchase of this Terrain Outdoor® Hunting Blind product. To ensure your personal safety, please take a moment to carefully read this Instruction Manual in its entirety before attempting to set-up, install, remove and/or otherwise use this Terrain Outdoor® Hunting Blind product(s). Failure to follow these instructions may result in serious injury or death!

If you have any questions about the installation, removal, and/or use of this product, or any other Terrain Outdoor® product(s) do not hesitate to call one of our customer service representatives at (989) 575-3122 or feel free to visit us online at [www.terrainoutdoor.com](http://www.terrainoutdoor.com). Our customer service representatives will answer any questions you may have about any of the complete line of Terrain Outdoor® products.

If you find damaged or missing parts in a newly purchased product, please contact the manufacturer at (989) 575-3122 for replacements.

Please note that **WARNING!** Statements have been placed throughout this Instruction Manual. These statements point out important safety information and instructions, which, if not followed could endanger the personal safety and/or property of the operator(s). It is imperative that the operator(s) of this product, or any other Terrain Outdoor® product(s) read and follow all the instructions and warnings contained in this Instruction Manual prior to attempting to use this Terrain Outdoor® product(s), or any other Terrain Outdoor® product(s). Failure to comply with these instructions and/or warnings may result in serious personal injury or death!

**WARNING!** Failure to read and strictly comply with the instructions contained in this Instruction Manual may result in serious injury or death!

**WARNING!** Prior to each hunt, you must inform someone of your hunting location, including the specific location of your blind and the expected duration of your hunt. Failure to follow these instructions may result in serious injury or death!

**WARNING!** The safe use and operation of this product(s) is the sole responsibility of the user. It is also the sole responsibility of the owner to provide any person(s) who borrow or purchase this product(s) with these instructions. Failure to follow these instructions may result in serious injury or death!

**WARNING!** Prior to each hunt, make sure that you have a signaling device (e.g., mobile phone, radio, whistle, signal flare or Personal Locator Device (PLD) in your possession and in an operable condition. This device must be within easy access shall you

experience the need to contact emergency assistance. Failure to follow these instructions may result in serious injury or death!

**WARNING!** This product(s) is designed for adult use only. No one under the age of 16 shall attempt to use this or any other product(s) without direct adult supervision. Failure to follow these instructions may result in serious injury or death!

**WARNING! DO NOT** modify, fix/repair, alter, bend, cut, weld, drill, or heat the blind in any way without explicit authorized and written instructions from the manufacturer. Additionally, do not attach anything to your blind without explicit authorized and written instructions from the manufacturer. Failure to follow these instructions may result in voided warranty, serious injury, or death!

**WARNING!** Never use any kind of fuel-burning products (heaters, lanterns, etc.) inside this enclosure. Use of fuel burning products can result in dangerous concentrations of carbon monoxide, a colorless and odorless gas. Breathing carbon monoxide will cause serious injury or death.

**WARNING!** Always use hearing protection when discharging firearms, especially within an enclosed space.

**WARNING!** This product is not fireproof. The plastic will burn if it comes into contact with an open flame or fuel source. Keep product away from direct flame. Failure to follow these instructions may result in serious injury or death!

**WARNING!** This product is for hunting purposes only! It is not to be used as a camping tent or for any other function. Failure to follow this warning may result in serious injury or death!

**WARNING!** Practice safe and proper firearms handling while using this product. Keep firearm or weapon **unloaded until seated** in the blind and no further movement is expected. **Unload the firearm or weapon prior to exiting** the blind. Failure to follow this warning may result in serious injury or death!

**WARNING!** Practice safe and proper firearms handling while using this product. Keep firearm pointed in the direction of least consequence with the safety **ON** in **SAFE** position at all times. Failure to follow this warning may result in serious injury or death!

California Prop 65 Warning: This product may contain a chemical known to the state of California to cause cancer, birth defects, or other reproductive harm.

**If you have any questions about the assembly, installation or use of this product, or any other product, please do not hesitate to call one of our customer service representatives at (989) 575-3122 and they will answer all questions you may have about any of the complete line of products. Please have the product model number (04621V) and component part number ready before calling to better assist you.**

**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

## PARTS LIST

Part #	Description	Qty
2020	Bolt (¼-20 x 1¼")	51
2021	Bolt (10-24 X ½)	50
2023	Bolt (10-32 X ¾)	23
3013	Washer (¼ID Rubber)	11
3014	Washer (¼ ID ⅝ OD)	51
6012	Nut (10-24 Nut)	50
6013	Wing Nut (¼-20)	51
6014	Nut (10-32 Lock Nut)	23
9000	Hinge (1 ⅜ X 1 ½")	14
INS-TERRAIN-HANDLE	Door Handle	1
INS-TERRAIN-TURN-BUTTON	Window Latch	22
03867V-A	Archer sidewall	4
04627V-A	Door/Frame Assembly	1
04630V	Roof Cap	1
03866V-C	Roof Panels	5
INS-COMMON TAB PLEXIGLASS	Window	1
INS-COMMON LIVING HINGE	Window Hinge	1
INS-SHORT BOW TAB PLEXIGLASS		4
INS-SHORT BOW LIVING HINGE		4
INS-TERRAIN-LONG BOW WINDOW		4

## TOOLS NEEDED

Phillips Screw Driver

⅜" Socket Wrench **OR** Adjustable Crescent Wrench



## SPECS

**Size:** 73"x73"x85" (LxWxH)

**Weight:** 128 lbs

**Maximum Occupancy:** One adult with gear

**Color:** Olive drab exterior, black interior

## STORAGE AND CARE

All Terrain Outdoor® hunting blinds are made with an industrial grade UV Protected High Density Polyethylene material. All components and hardware is resistant to sun, moisture, and normal temperature fluctuation. This product has a 1 year limited warranty against defects in materials and workmanship.

To extend the life of this product, keep out of prolonged exposure to sunlight in a shaded area. Keep in an area away from high winds. Make sure that all windows and the door are closed tightly when not in use.


 
To remove surface blemishes and stains use a wet rag and mild detergent as needed. Rinse well. Bleach based cleaners may be used sparingly on the wall, roof, and door panels to remove stains - **AVOID WINDOWS**. Use only a non-abrasive cloth and a cleaner labeled for use with Acrylic or Plexiglass to clean the windows.

**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

## INCLUDED ITEMS AND HARDWARE LIST

Check to make sure you have all the required parts and hardware. If you find damaged or missing parts in a newly purchased product, please contact the manufacturer at (989) 575-3122 for replacements.

Part #	Description	Qty
2020	Bolt (¼-20 x 1 ¼")	51
		
2021	Bolt (10-24 X ½)	50
		
2023	Bolt (10-32 X ¾")	23
		
3013	Washer (¼ID Rubber)	11
		
3014	Washer (¼ ID ½ OD)	51
		
6012	Nut (10-24 Nut)	50
		
6013	Wing Nut (¼-20)	51
		

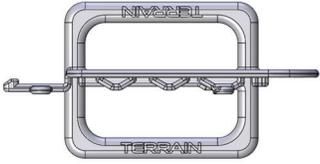
Part #	Description	Qty
6014	Nut (10-32 Lock Nut)	23
		
9000	Hinge (1 ⅜ X 1 ½")	14
		
INS-TERRAIN-HANDLE	Door Handle	1
		
INS-TERRAIN-TURN-BUTTON	Window Latch	22
		
03867V-A	Archer Sidewall	4
		

**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

## INCLUDED ITEMS AND HARDWARE LIST

Check to make sure you have all the required parts and hardware. If you find damaged or missing parts in a newly purchased product, please contact the manufacturer at (989) 575-3122 for replacements

Part #	Description	Qty
04627V-A	Door/Frame Assembly	1

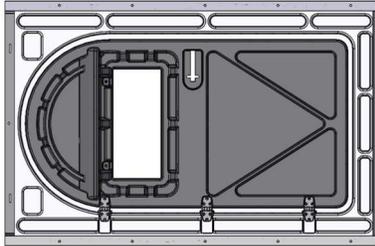

03866V-C	Roof Panels	5
----------	-------------	---



04630V	Roof Cap	1
--------	----------	---



Part #	Description	Qty
INS-SHORT BOW TAB PLEXIGLASS		4



INS-TERRAIN-LONG BOW WINDOW		4
-----------------------------	--	---



INS-SHORT BOW LIVING HINGE		4
----------------------------	--	---





INS-COMMON TAB PLEXIGLASS	Window	1
---------------------------	--------	---





INS-COMMON LIVING HINGE	Window Hinge	1
-------------------------	--------------	---



**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

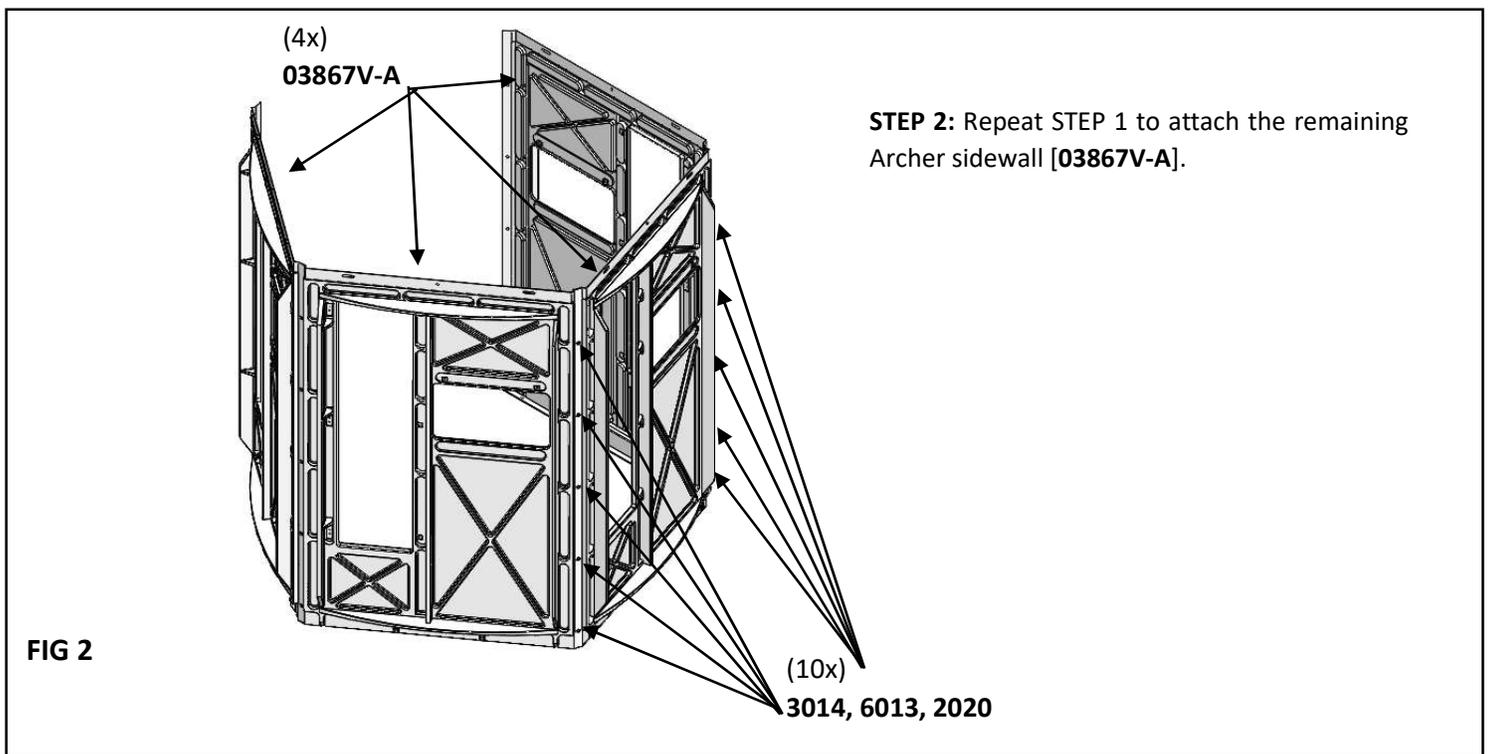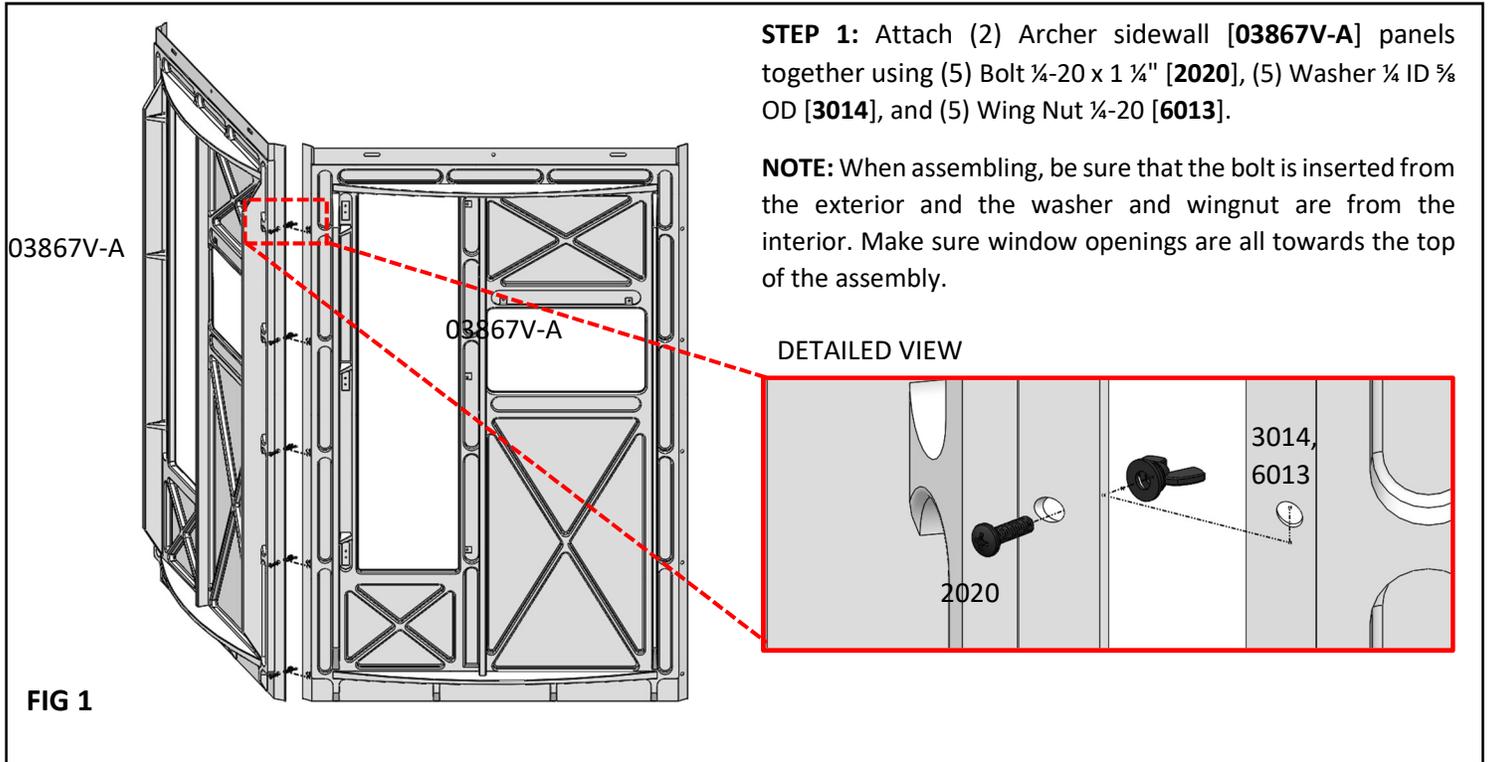

**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

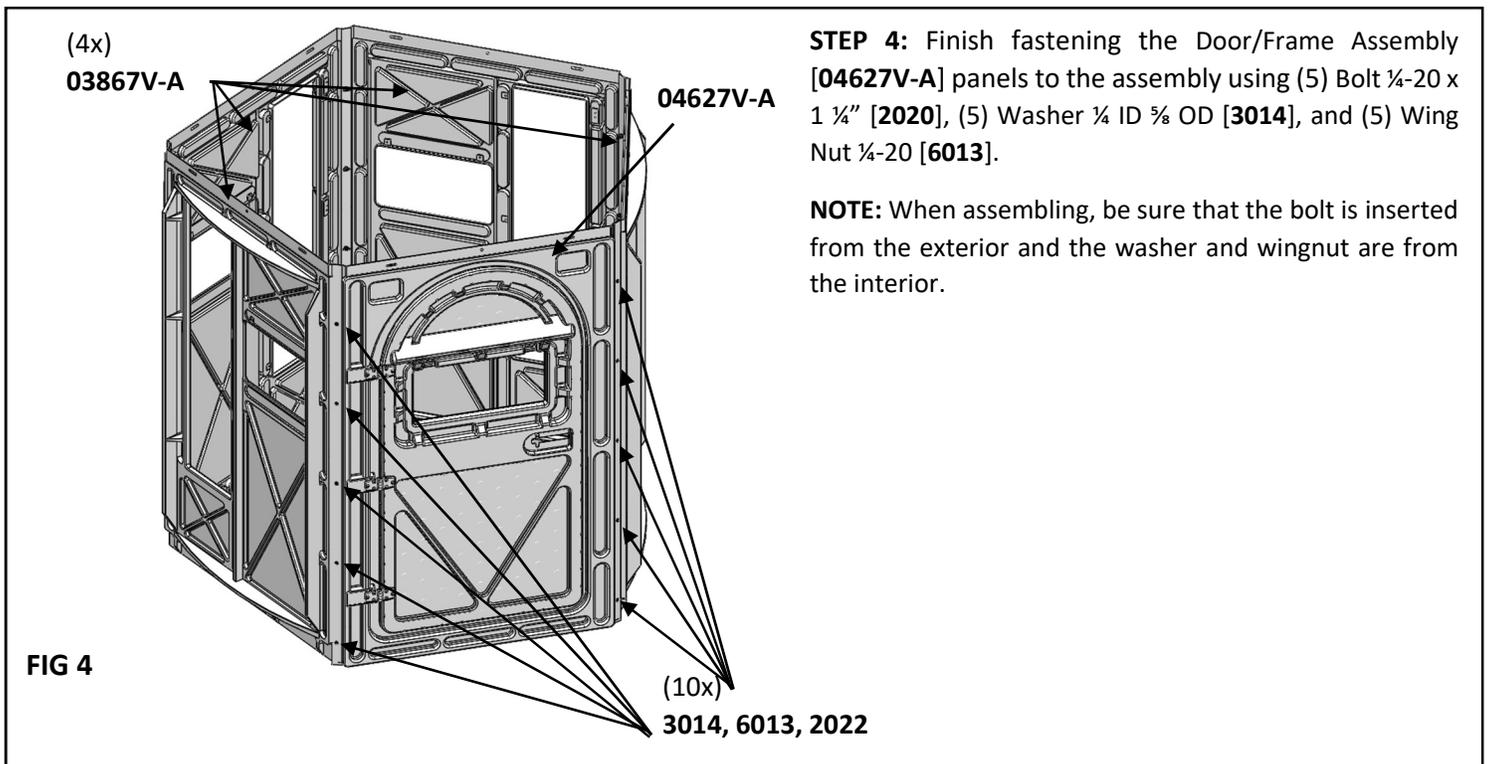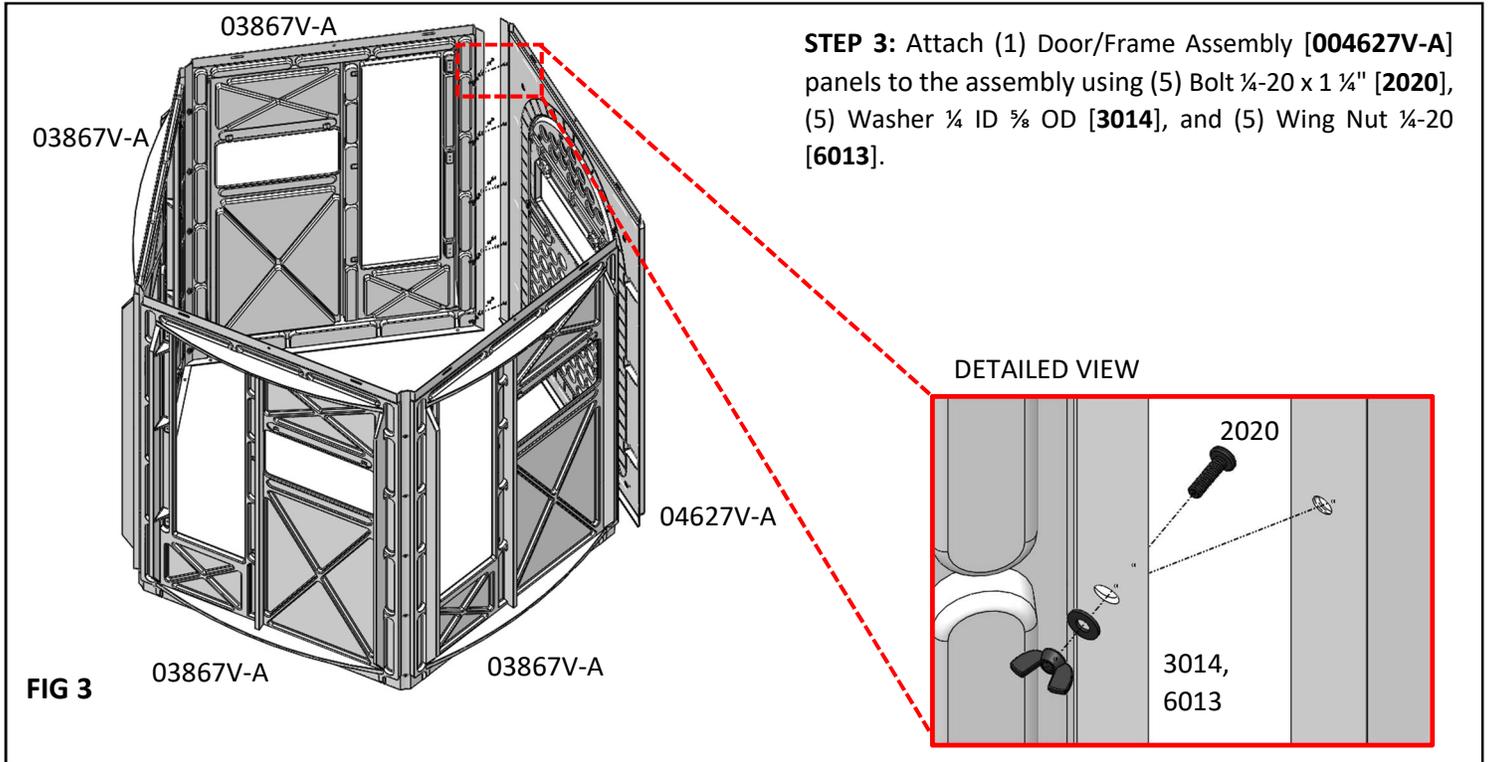


**READ THIS MANUAL IN ITS ENTIRETY BEFORE ASSEMBLING OR USING THIS PRODUCT.**

**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.


**FIG 5**

(x5) 2020,  
3013, 6013

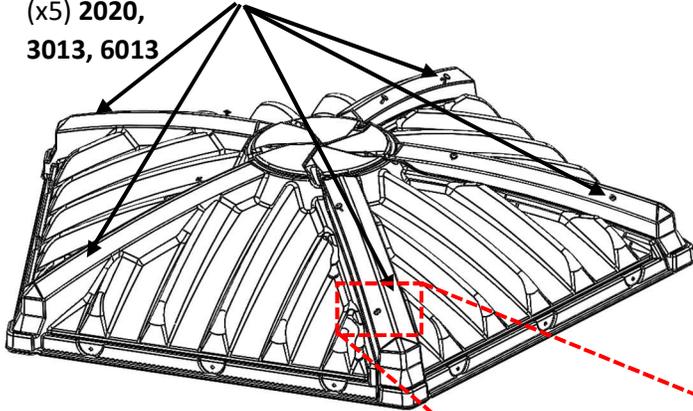

**STEP 5:** Locate all 5 roof sections [3866V-C]. Lay each section so they overlap each other with the holes lined up, small ribs inside large ribs. Using a Phillips screw driver, attach the roof section together at the Outside holes only, using the 2022 bolts provided, the rubber washers, and the wingnuts. Do not tighten all the way.


**DETAILED VIEW**

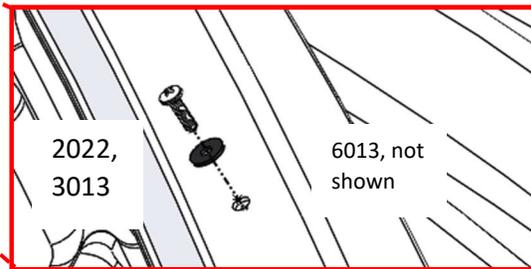

2022,  
3013

6013, not  
shown

**FIG 6**

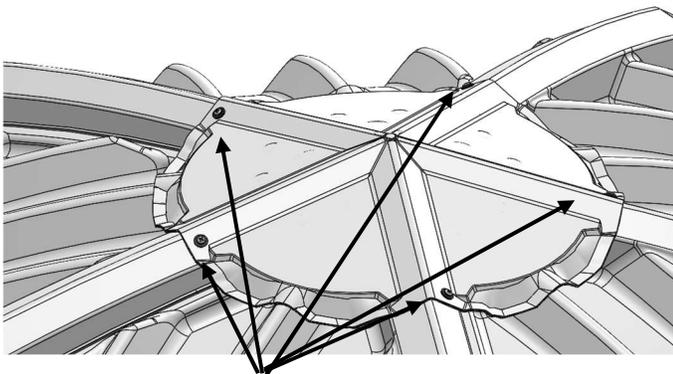


(x5) 2020,  
3013, 6013

**STEP 6:** Locate roof cap [04630]. Align the roof cap over the center of the roof assembly. This step will require standing the roof up to attach it. With the roof on its side, attach the roof cap with the black bolts [2022], rubber washer [3013], and wing nuts [6013]. Once all the bolts are in place, tighten down.


**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

FIG 7

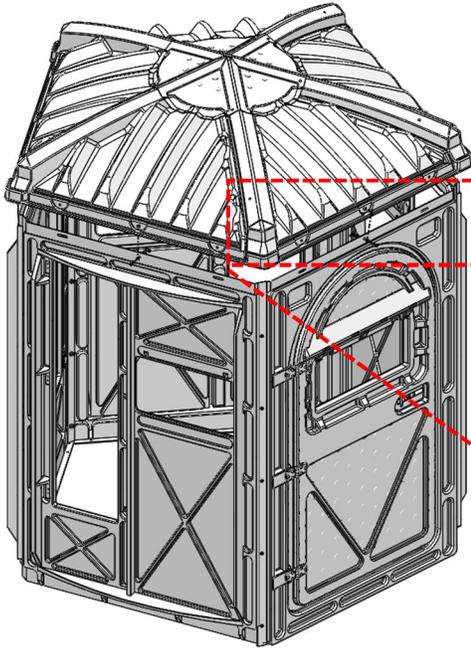

**STEP 7:** Fasten the Roof to the assembly using (4) Bolt  $\frac{1}{4}$ -20 x  $\frac{7}{8}$ " [2022], (4) Washer  $\frac{1}{4}$  ID  $\frac{5}{8}$  OD [3014], and (4) Wing Nut  $\frac{1}{4}$ -20 [6013]. Fasten only through the **MIDDLE HOLES** on each side.


DETAILED VIEW

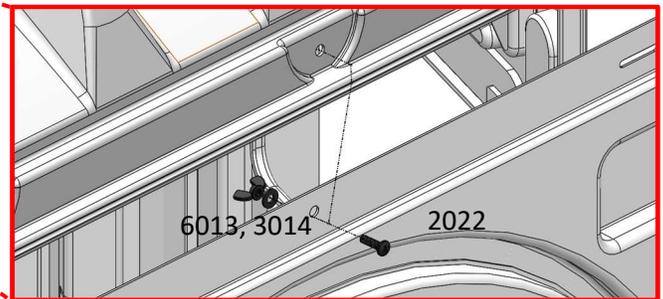

**Roof Support Note (optional):** This product is not designed for sustained snow load. If the product will be unattended for any period of time through the winter months we recommend a 2x4 support being placed in the center of the structure. We recommend a 83" length. Cut a 2x4 to this measurement. Lodge the support between the floor and the roof when blind is not in use. This will help support the roof under heavy snowfall. NOTE: If your roof does collapse it can be reset by disconnecting the roof and placing it on the ground. Once it is on the ground, stand on the roof to push the dent out and back into shape.




**NOTE:** When assembling, be sure that the bolt is inserted from the exterior and the washer and wingnut are from the interior. Make sure that the roof panel is resting **ON and OVER** the sidewall panels.

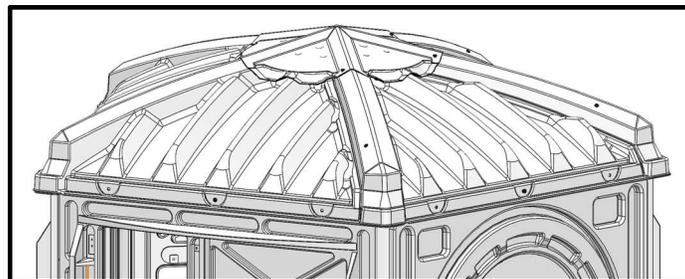

**READ THIS MANUAL IN ITS ENTIRETY BEFORE ASSEMBLING OR USING THIS PRODUCT.**

**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.


**FIG 8**

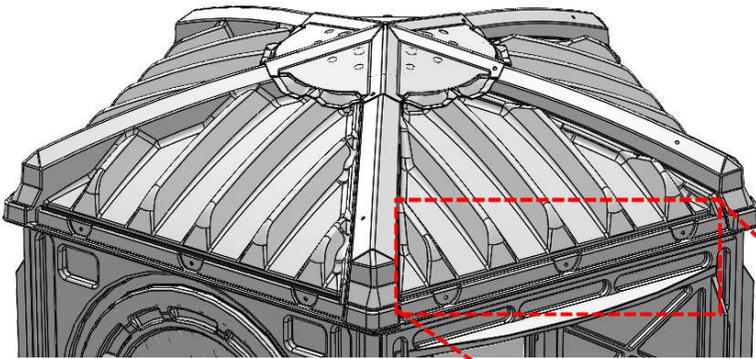


**STEP 8:** Finish fastening the Roof to the assembly with (8) Bolt ¼-20 x 7/8" [2022], (8) Washer ¼ ID ¾ OD [3014], and (8) Wing Nut ¼-20 [6013]. Fasten through the holes on the Roof and the slots on the wall/door panels.

**NOTE:** When assembling, be sure that the bolt is inserted from the exterior and the washer and wingnut (NOT SHOWN IN PICTURES) are from the interior.

DETAILED VIEW

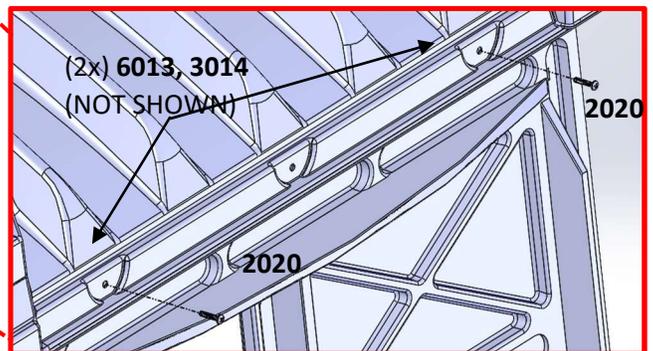


**FIG 9**

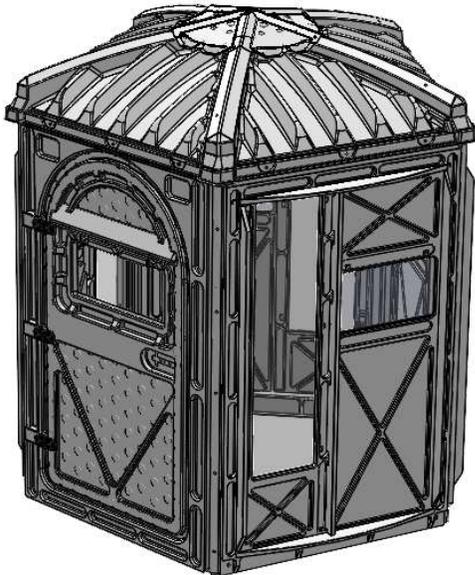


**STEP 9:** Install the Door Handle [INS-TERRAIN-HANDLE] into the Door/Frame Assembly [04627V-A] panel. This step does not require any additional hardware.

**NOTE:** When assembling, be sure the handle is in the correct orientation as shown. The TERRAIN text faces up, the LATCH faces towards the frame, and the WEATHER COVER is on the exterior.

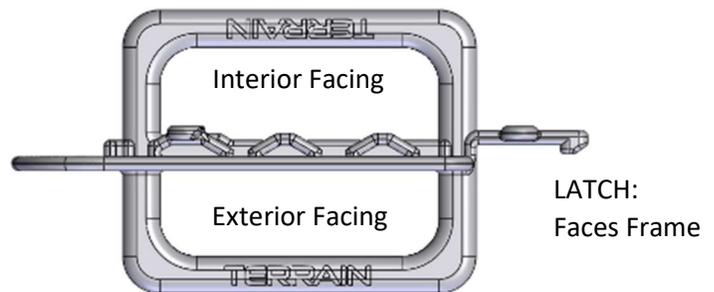



**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

FIG 10

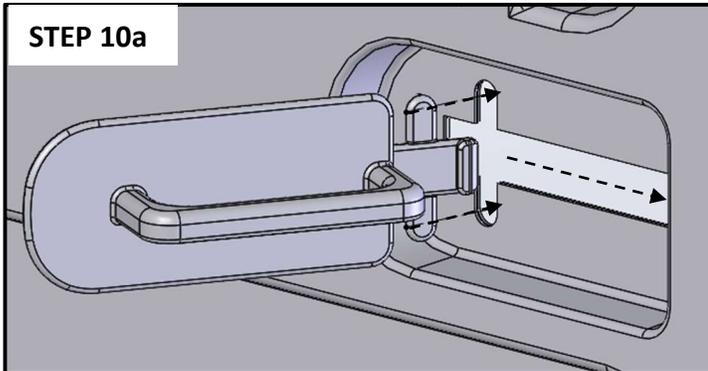

**STEP 10a:** Install the Door Handle [INS-TERRAIN-HANDLE] into the Door/Frame Assembly [04627V-A] from the exterior of the panel. Insert the tabs near the latch on the Door Handle into the slot as shown. Slide the partially installed handle towards the door frame.


**STEP 10b:** Push the back set of tabs on the Door Handle through the slot. This is a tight fit, designed to be a snap fit. The tabs are angled to assist with installation.

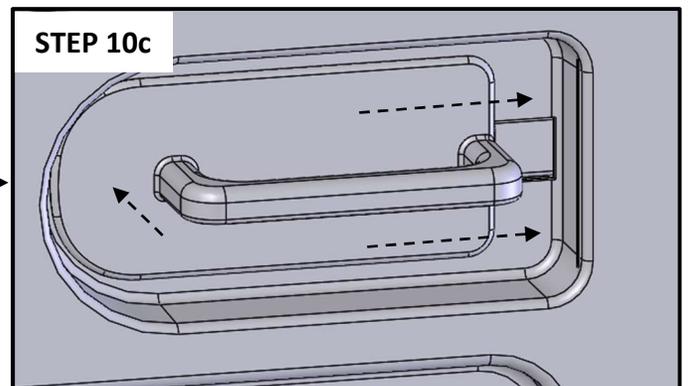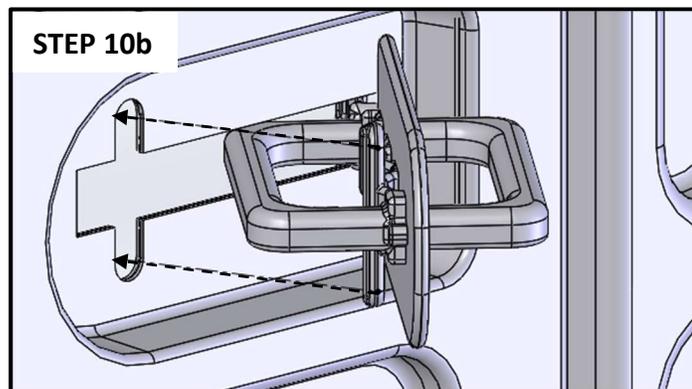

**STEP 10c:** While applying pressure in on the handle to keep the tabs in the slot, slide the handle towards the door frame.

**NOTE:** While the handle is removable, it is designed to be installed only once. Refrain from removing and reinstalling the handle more than needed.

DETAILED VIEW - INTERIOR

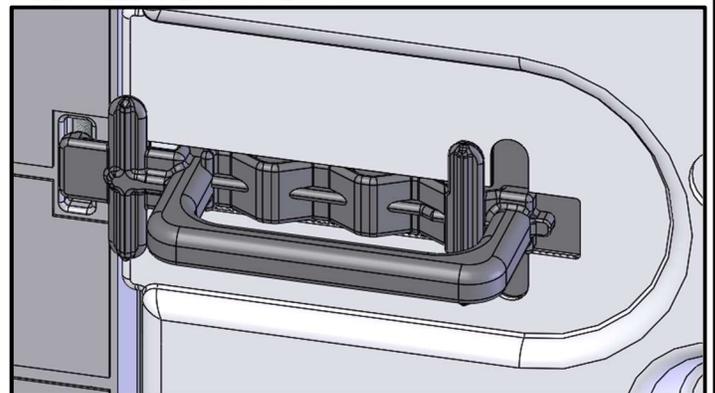

**READ THIS MANUAL IN ITS ENTIRETY BEFORE ASSEMBLING OR USING THIS PRODUCT.**

**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

**FIG 11**

**STEP 11:** Install (2) Window Latches [**INS-TERRAIN-TURN-BUTTON**] into the Door/Frame Assembly [**04627V-A**] and (20) Window Latches into Common Sidewall Panels [**03867V-A**]. Use (22) Bolts (10-32 X ¾") [**2023**] and (22) Nuts (10-32 Lock Nut) [**6014**].


**NOTE:** Install using Bolt and Window Latch from the interior and the Nut from the exterior. Tighten just enough to keep latches open or closed - **DO NOT**

**For Each Side Panel:**


(X5) 2023

(X5) 6014

(X5) INS-TERRAIN-TURN-BUTTON

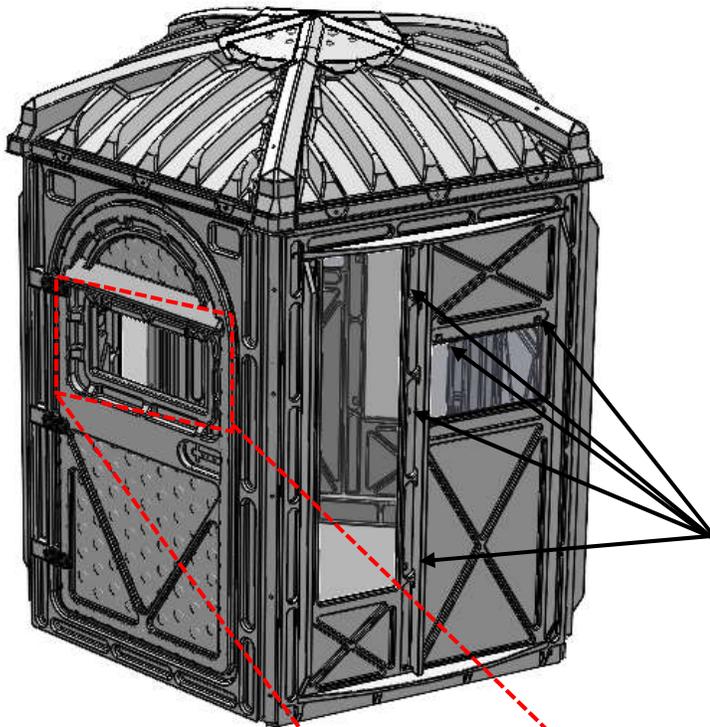


Detailed View

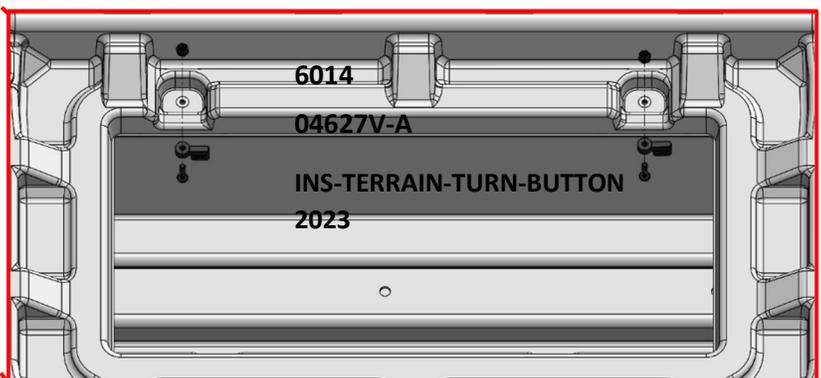

**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.


**FIG 12**

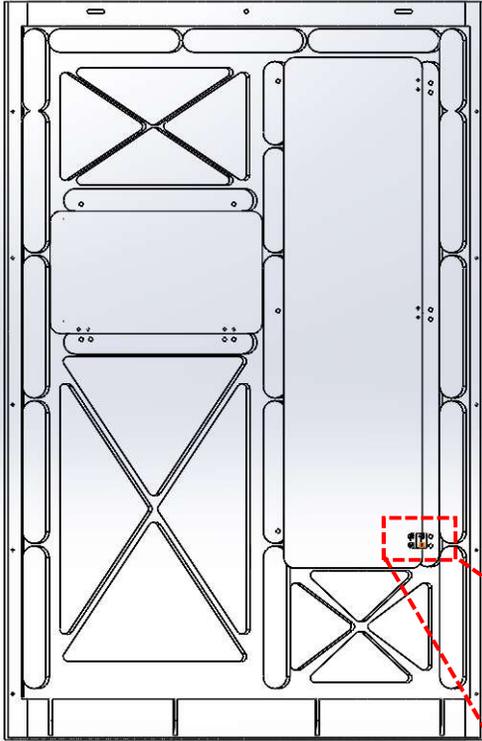

**STEP 12a:** Using 2 bolts (2021), a hinge, and 2 nuts (6012) attach the hinge to the long window as shown (RED IN PHOTO BELOW). Using 2 more bolts (2021) and 2 nuts (6012) attach the hinge to the blind wall (BLACK IN PHOTO BELOW). Make sure the nuts are on the outside of the blind wall and window as shown.

**STEP 12b:** Repeat the above step for all three hinges on every tall window (4 windows total).

Detailed View

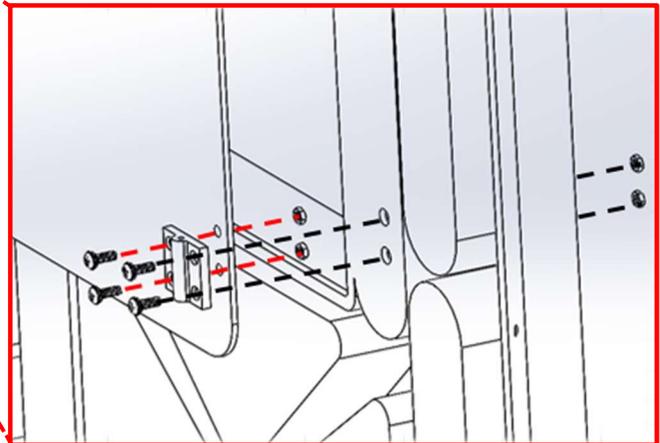


**ATTENTION!** DO NOT RETURN TO RETAILER. IF THERE ARE ANY MISSING OR BROKEN COMPONENTS PLEASE CONTACT THE MANUFACTURER AT (989) 575-3122. REFERENCE BLIND MODEL: **ARCHER 04621V** AND THE SPECIFIC COMPONENTS NAME FROM THE PARTS LIST.

**FIG 13**

**STEP 13:** Attach (1) Windows [INS-COMMON TAB PLEXIGLASS] to (1) Window Hinges [INS-COMMON LIVING HINGE]. Attach (4) Small windows [INS-SHORT BOW TAB PLEXIGLASS] to (4) Short window hinges [INS-SHORT BOW LIVING HINGE]. Groove in Window must snap into place on tab of Window Hinge. If installed correctly and fully, a small snapping noise can be heard.

**NOTE:** Window Hinges may be loose in the box OR connected to the wall/door panels.

Detailed View

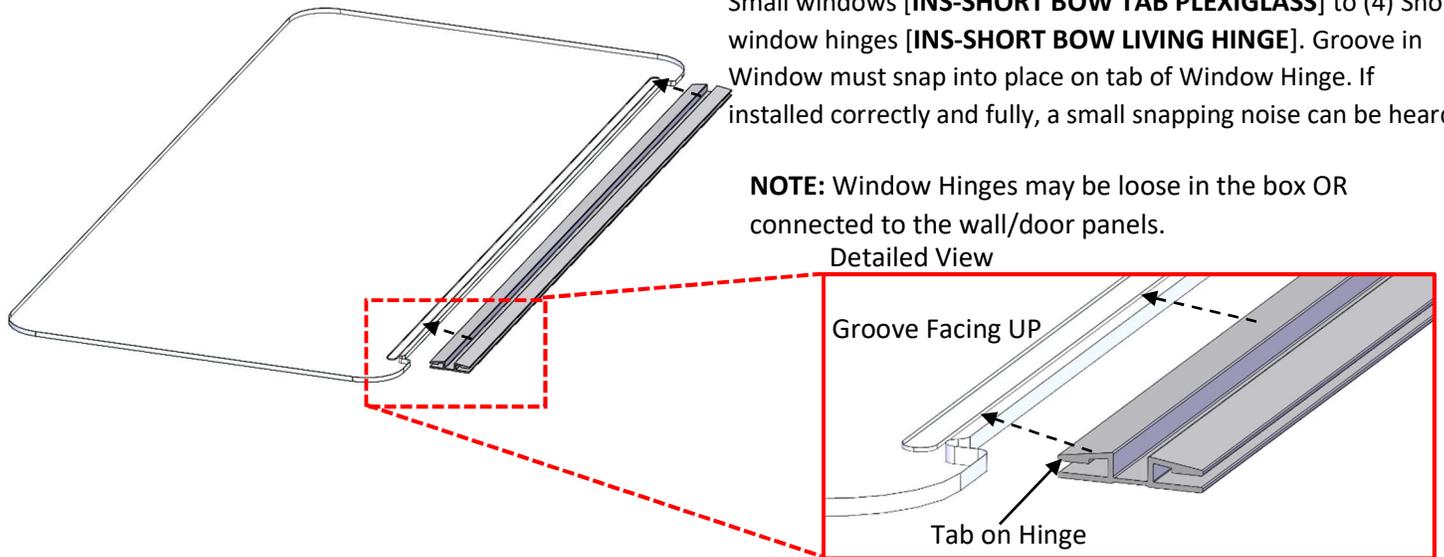


**FIG 14**

**STEP 14:** Attach (1) assembled Window/Hinge to the Door panel. Attach (4) assembled small Window/hinges to the side walls. Install from the interior of the blind, and keep the Tab on the Hinge and the Groove on the Window facing UP. Press fully over edge of window cut out. If installed correctly and fully, a small snapping noise can be heard.

**NOTE:** Window is designed to fold open completely. If Hinge binds on itself during opening or closing it is installed incorrectly.

Detailed View

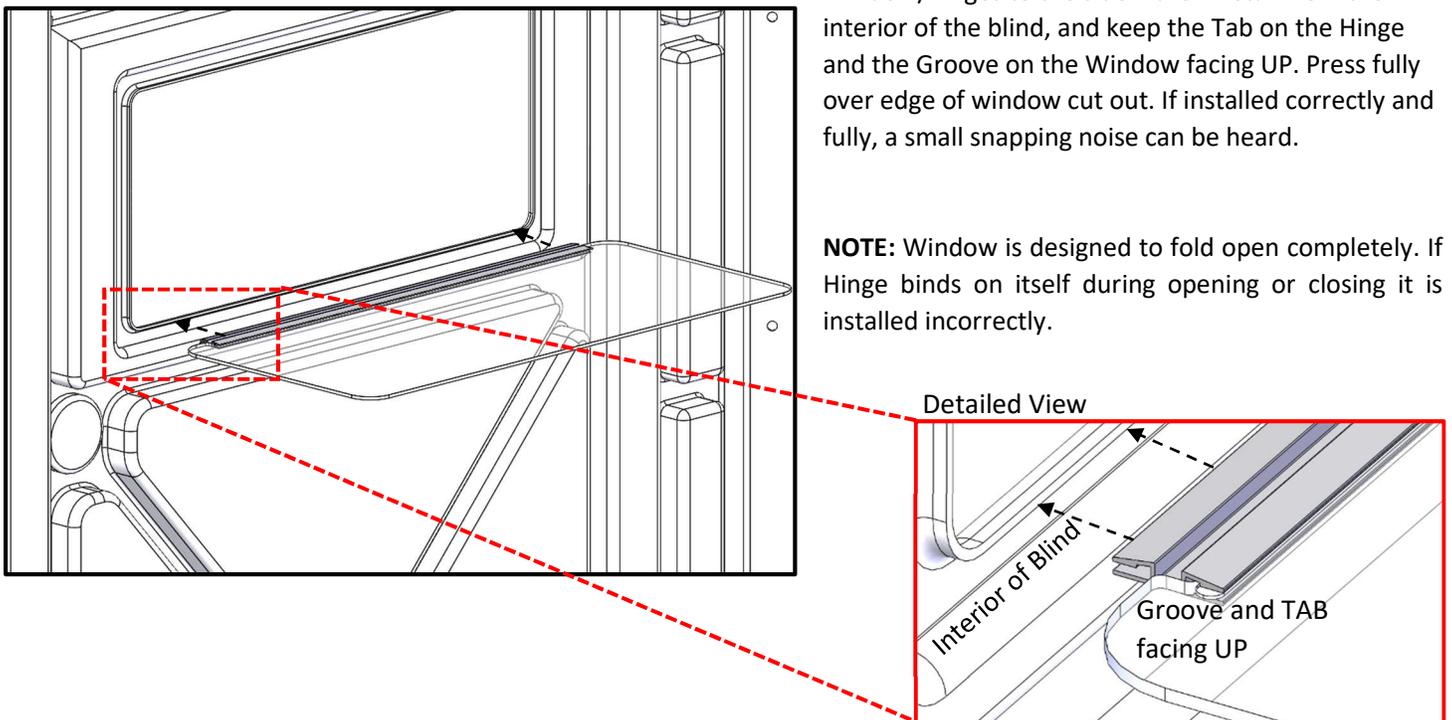

**READ THIS MANUAL IN ITS ENTIRETY BEFORE ASSEMBLING OR USING THIS PRODUCT.**